


**CHORE-TIME**<sup>®</sup>



## **BROADCASTER™ ALERT SYSTEM**

**BECAUSE WHAT YOU DON'T  
KNOW CAN COST YOU!**

- › Alerts you to alarm notifications
- › Calls a pre-determined list of up to 10 notification numbers
- › Receive detailed alerts from Chore-Time's PigCentral™ Control

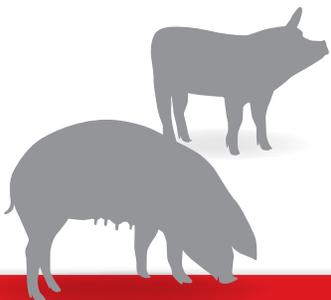

# BROADCASTER™ ALERT SYSTEM

Missing an alarm can mean big dollars with today's large pig barns. The BROADCASTER™ Alert System from Chore-Time keeps you informed of changes in your hog barn environment. Avoid costly surprises with Chore-Time's BROADCASTER™ Alert System.

## BROADCASTER™ Alert System

- › Alerts you to alarm notifications and sends the alerts to your mobile phone (text or voice) or land line (voice).
- › Calls a pre-determined list of up to 10 notification numbers. Use any mix of mobile lines, text numbers and land lines in any sequence.
- › An output is available to also connect an external siren or light.
- › Set up acknowledgement codes and program the amount of delay before and between notifications.
- › Relays detailed alerts from Chore-Time's PigCentral™ Control.
- › Connect a maximum of up to 20 PigCentral™ Controls to each BROADCASTER™ Unit.
- › Add and name up to eight user-selected alarm inputs (such as barn generator, water pressure, door switches, etc.) at each BROADCASTER™ Main and Auxiliary Box, subject to system limitations.

## Flexible Connectivity Options

- › Available with fiber-optic connectivity for faster communication and less susceptibility to surges and lighting.
- › Wireless connectivity for areas where wired connection is not practical.
- › Traditional ethernet cable connection with Cat5 cable can also be used for




Avoid costly surprises by using Chore-Time's BROADCASTER™ Alert System. Alerts you to alarm notifications and sends the alerts to your mobile phone or land line. Calls a pre-determined list of up to 10 notification numbers.

- communications as well as auxiliary devices such as cameras, printers, etc.
- › Combine any of the above as suitable for the layout of your complex.

## Installation Options

- › Install one main box per farm of up to 20 barns.
- › Directly connect each Chore-Time PigCentral™ Control to the Chore-Time BROADCASTER™ Main Box.
- › For non-PigCentral™ Controls, connect BROADCASTER™ Auxiliary Boxes from each barn to the main BROADCASTER™ Box.
- › For ancillary alarms, connect through additional BROADCASTER™ Auxiliary Boxes (with up to eight inputs per box).

Now available throughout the United States and in select other countries. Contact your PigTek dealer or PigTek regional sales manager for more details.

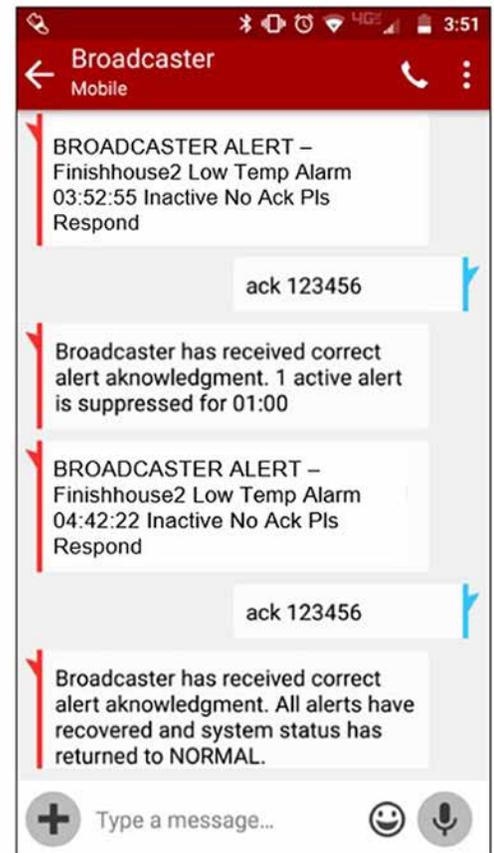

Sample Alert Notification

